# POP4IR<sup>M</sup>

## Instruction Manual




#### Table of Contents

Parts Diagram	3
Warning	
Operating Precautions	
Using Your Popper:	
Parmesan and Black Pepper Popcorn	
Caramel Apple Popcorn	
Paula's Chocolate Drizzle Popcorn	
BBQ Flavored Popcorn	
Product Warranty	
J	

<sup>\*</sup>For the most up-to-date manual, or for more information regarding this product, visit our website: **VKPbrands.com** 

### Popair Popcorn Popper Model VKP1162

<u>Parts Diagram</u> Your complete Popcorn Popper includes everything shown below:

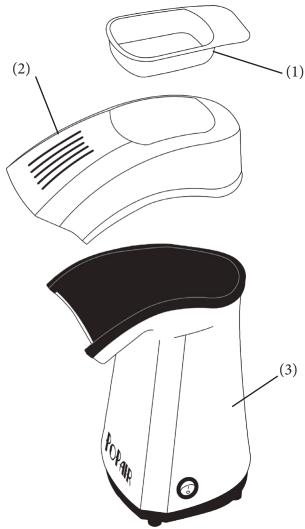

#### Parts List:

- (1) VKP1162-1 Measuring Lid
- (2) VKP1162-2 Cover
- (3) VKP1162-3 Motor Base

All replacement parts are available on our website, VKPbrands.com.

#### **Warning**

- To prevent personal injury or property damage, read and follow all instructions and warnings.
- Do not use appliance for other than intended use.
- Do not operate if the appliance is not working properly or if it has been damaged in any manner. For service information see warranty page.
- Do not leave unit unattended while plugged into an electrical outlet.
- For household use only.
- Never immerse the motor base in water.

#### **Operating Precautions**


- Use care as the popper is very hot when in use.
- Do not store until popper has completely cooled.
- Close supervision is required when popper is being used by children.
- Never place anything other than popcorn in the popping chamber.
- Do not use the popper without the cover.

#### **Using Your Popper:**

Before using for the first time, and following periods of prolonged storage, remove the top cover and wipe thoroughly inside with a soft, dry cloth.

When assembling, dismantling, or cleaning, always ensure that the appliance is not connected to the power supply.

- 1. Fill the measuring lid level with popcorn. Fresh popcorn kernels result in fluffy popcorn and fewer unpopped kernels.
- 2. Remove the cover and pour the popcorn kernels directly in the popping chamber.
- 3. Replace the cover and place a Popcorn Marquee bucket (sold separately) or heat resistant bowl (not included) beneath the chute.
- 4. Place the measuring lid back into its position in the cover.
- **5. Optional:** Measuring lid can be used for melting butter during the popping process. For best results, chop butter into 1 tablespoon pieces before placing in the measuring lid.

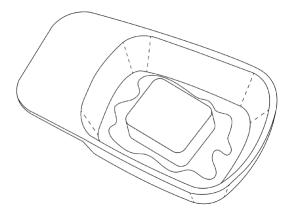

- **6. NOTE:** DO NOT put more than 1/4 cup of butter in the measuring lid as it may overflow into the popping chamber, causing damage to the popper.
- 7. Plug in the popper and turn the switch to "I" to begin popping.
- 8. DO NOT remove the measuring lid while popcorn is popping, or hot unpopped kernels will shoot out, possibly causing injury.
- 9. Switch to "O" to turn off the popper when all kernels are popped or the popping slows to two seconds or greater between pops.
- 10. Empty unpopped kernels from the popper. After allowing the popper to thoroughly cool, wipe it down with a soft, dry cloth and store.

#### Parmesan and Black Pepper Popcorn

#### Ingredients:

- 8 cups PopAir popped popcorn (approximately 1/2 cup unpopped)
- 2 tablespoons butter
- 1-2 teaspoons coarse cracked black pepper
- 3/4 cup freshly grated parmesan cheese
- 1. Melt butter in measuring lid of popper while popping the popcorn.
- 2. Pour melted butter over top of popped popcorn and toss to coat.
- 3. Sprinkle pepper and parmesan cheese over buttered popcorn and toss to distribute.
- 4. Serve and enjoy!

### Caramel Apple Popcorn

#### Ingredients:

- 1 cup butter
- 2 cups brown sugar
- 1 teaspoon salt
- 1/2 cup light corn syrup
- 1 teaspoon baking soda
- 10 cups PopAir popped popcorn
- 2 cups dehydrated apple slices
- 1. Combine popped corn and dehydrated apples in a large bowl.
- 2. Preheat oven to 200 degrees and line a cookie sheet with a silicone insert or parchment paper sprayed with cooking spray.
- 3. Melt butter and sugar together in a saucepan over medium heat. Stir in salt and corn syrup and allow to come to a boil. After boiling for 5 minutes, remove from the heat and stir in baking soda. The mixture will foam up, so stir quickly. Pour the hot mixture over the popcorn and apples.
- 4. Spread the popcorn mixture on the prepared cookie sheet and place into the preheated oven. For soft caramel, leave in the oven for 30 minutes (stir- ring every 10 minutes). For crisp caramel, leave in the oven for 60 minutes
- 5. (stirring every 10 minutes). Allow to cool. Serve and enjoy!

#### Paula's Chocolate Drizzle Popcorn

#### Ingredients:

- 8 cups PopAir popped popcorn (approximately 1/2 cup unpopped)
- 1 1/2 cups semisweet chocolate chips
- fine sea salt (optional)
- 1. Evenly spread popped popcorn on a cookie sheet.
- 2. Melt chocolate chips (Double boiler method: place chips in a bowl over a saucepan filled with slowly simmering water and stir until melted. Micro- wave method: place chips in a microwave safe bowl, heat on high for 10 seconds, stir, continue to heat for 10 second increments until melted.)
- 3. Drizzle chocolate over popped popcorn and sprinkle with salt (optional). Allow to cool.
- 4. Serve and enjoy!

### **BBQ Flavored Popcorn**

#### Ingredients:

- 2 teaspoons garlic salt
- 1 1/2 teaspoons smoked paprika
- 1 1/2 teaspoons sugar
- 1 teaspoon onion powder
- 1 teaspoon chili powder
- 1/2 teaspoon salt
- 1/4 teaspoon ground mustard powder
- 3 tablespoons oil of choice
- 8 cups PopAir popped popcorn (approximately 1/2 cup unpopped)
- 1. Mix first seven ingredients in a small bowl.
- 2. Spread popped popcorn on a cookie sheet. Drizzle with oil and shake spice mix evenly over popcorn.
- 3. Serve and enjoy!

### **Product Warranty**

Register your warranty online at: VKPbrands.com/Warranty

Model VKP1162 - Popair Popcorn Popper Warranty: 1 year

We are confident in the quality of our products and back each one with a limited warranty for the length of time specified above. Should you experience any problems with your product, please contact our Customer Service Department.

All warranty claims must be accompanied by a proof of purchase and are only valid if the appliance has been operated within the U.S. or Canada and used for its intended purposes. These products are for household use only.

#### **Items Not Covered:**

- Return shipping costs or returned items lost in transit.
- Damages to the product due to accident, misuse, abuse, negligence, or if the appliance has been altered in any way.
- Products used outside of the United States or Canada.



1804 Sandhill Rd Orem UT, 84058

Phone: **866-257-4741 VKPbrands.com**